



Cartridge

CLEANING & CHANGE OUT INSTRUCTIONS

CLEANING INSTRUCTIONS



1 Pour water into the cartridge during routine cleaning. Dome removal recommended for this "flushing" of the system.



2 Spray any cleaner approved by your facility inside and outside the bowl. No special cleaner required.



3 Wipe the interior and exterior of the bowl clean.




4 If the cartridge flow is slow or has stopped, you may extend the cartridge life by pouring water into the bowl and using a plunger to open the cartridge without removing it. It is recommended that the cartridge be replaced soon after using the plunger.

CARTRIDGE CHANGE INSTRUCTIONS



1 Remove the Smarty Dome and pour water into the bowl.

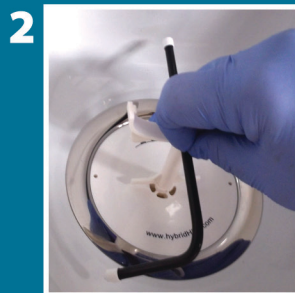

2 Twist removal tool clockwise onto center stem of the cartridge until snug. Do not over-tighten.




3 Lift tool and remove cartridge. Properly dispose of cartridge and save tool for future use.



4 Clean the inside of the housing and the bowl. Pour 4 liters (one gal) of soapy water into the bowl.



5 Insert new cartridge and fill with water.

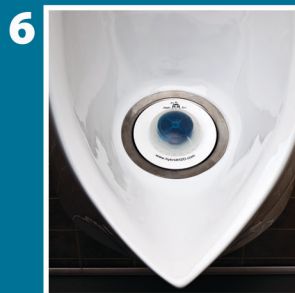

6 Twist Smarty Dome clockwise onto center stem of cartridge. Do not over-tighten.



7 Wipe the bowl clean. Urinal is ready for use.

Smarty Bee® & hybridH₂O® are registered trademarks.
Smarty Dome is a trademark.
Copyright 2014. All rights reserved.